 






声宝 收录 GF—

Specifications or wiring diagrams of this model are subject to change for the improvement without prior notice.

2SC1923(R)
FM MIX
变频混频

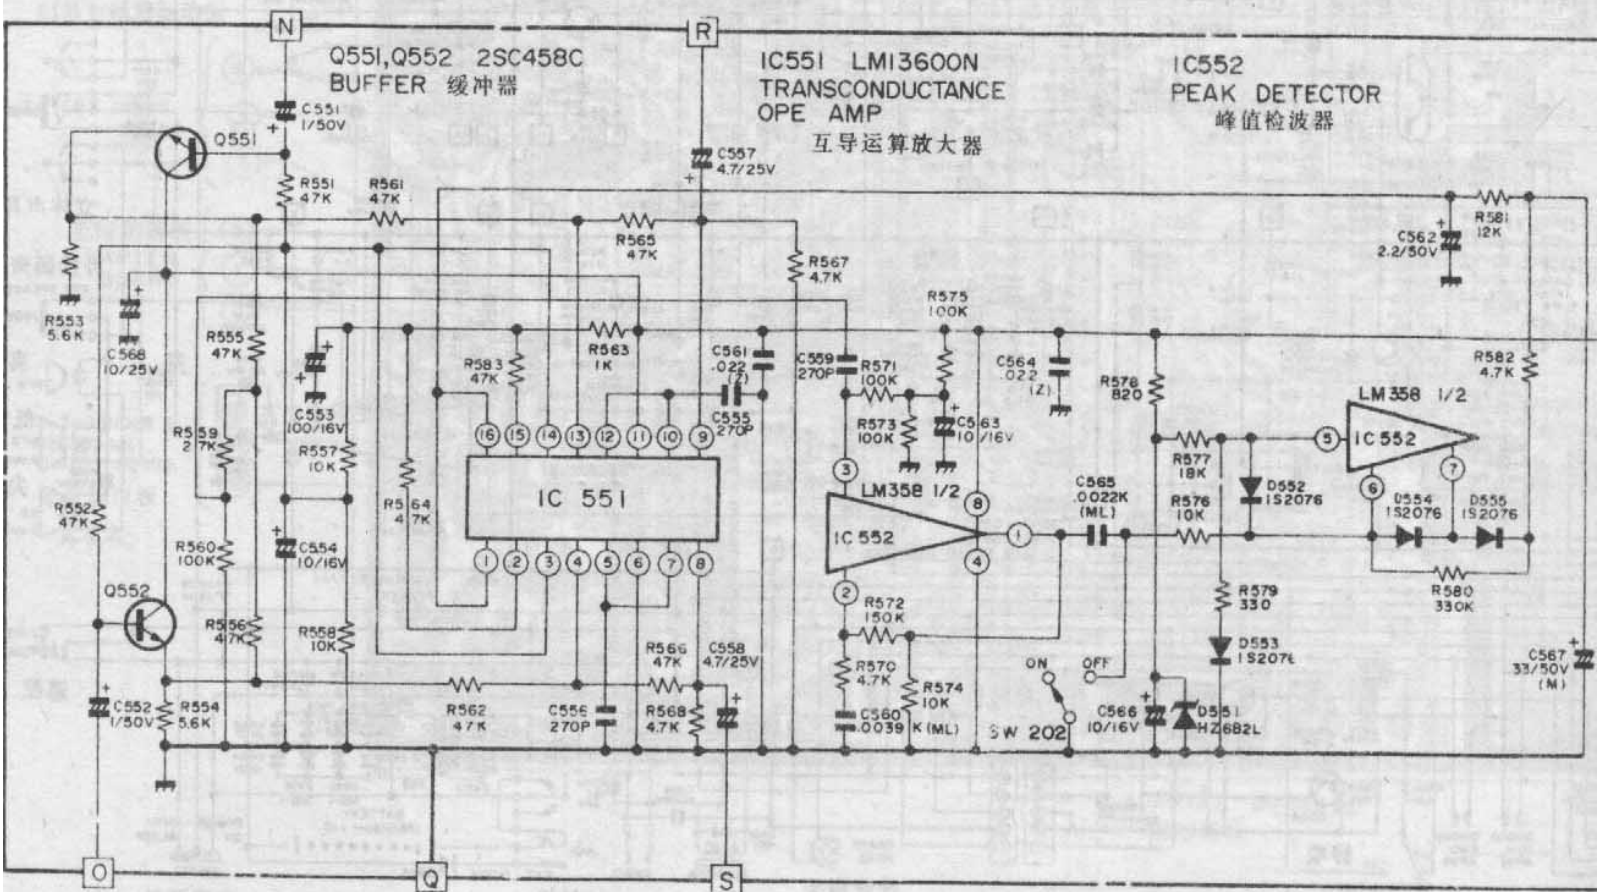

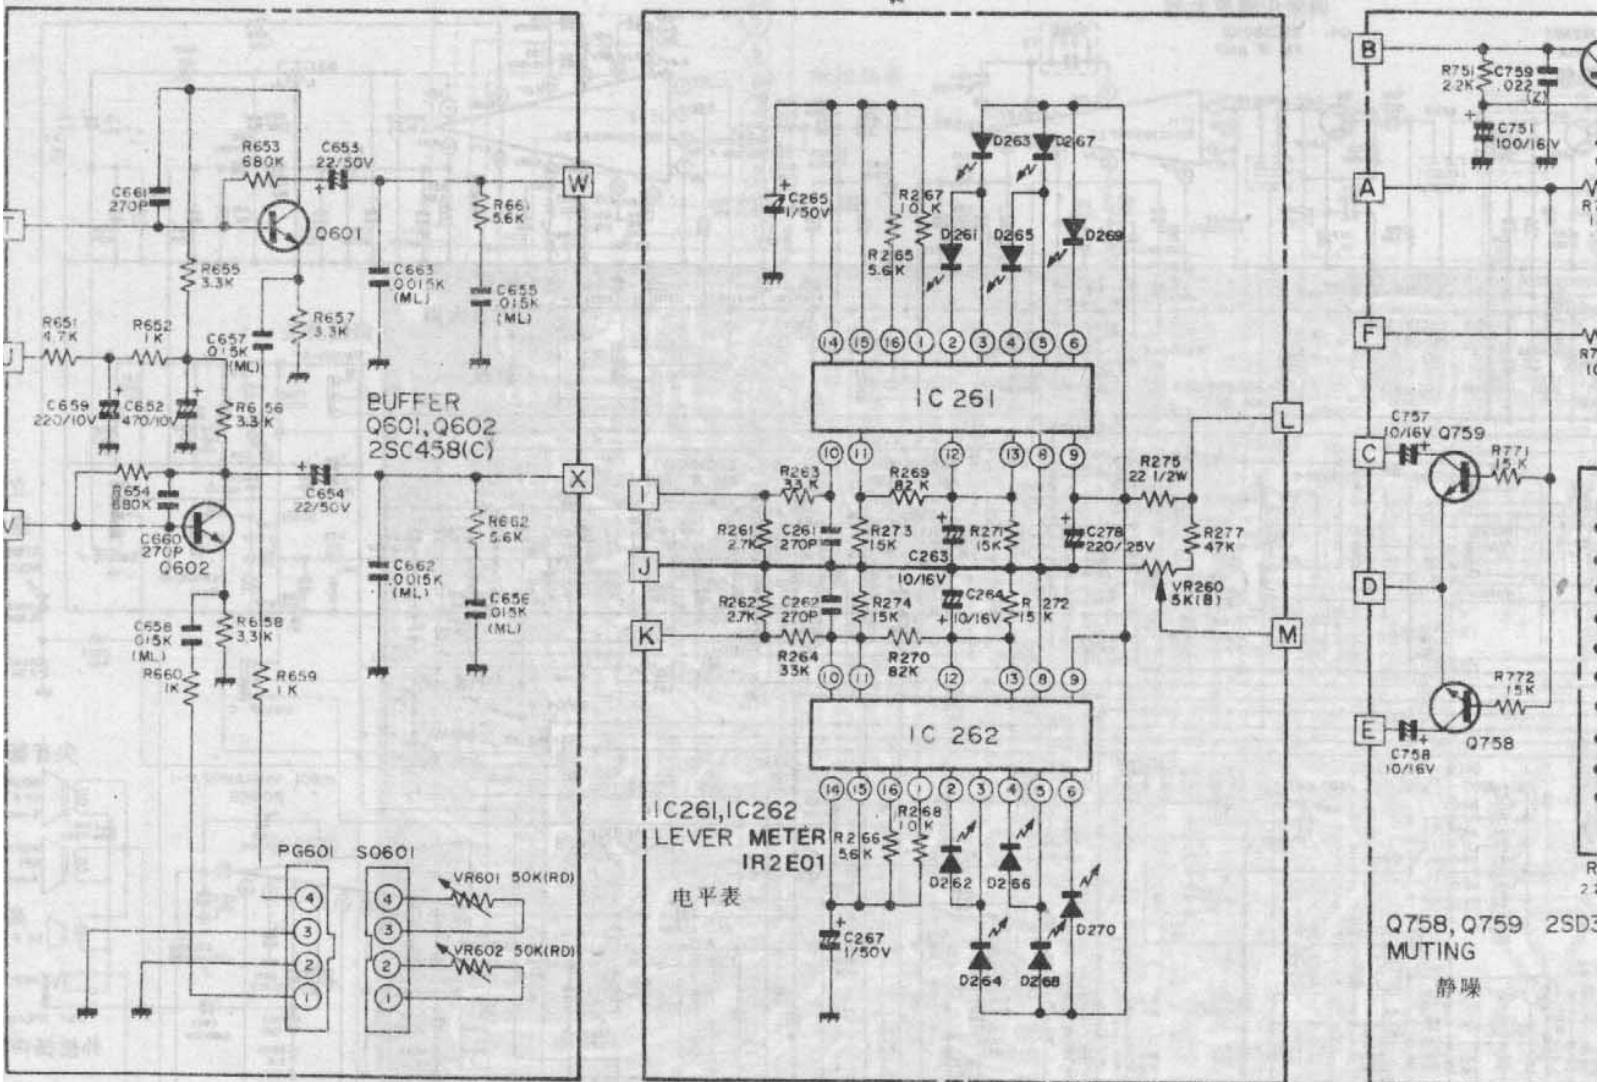

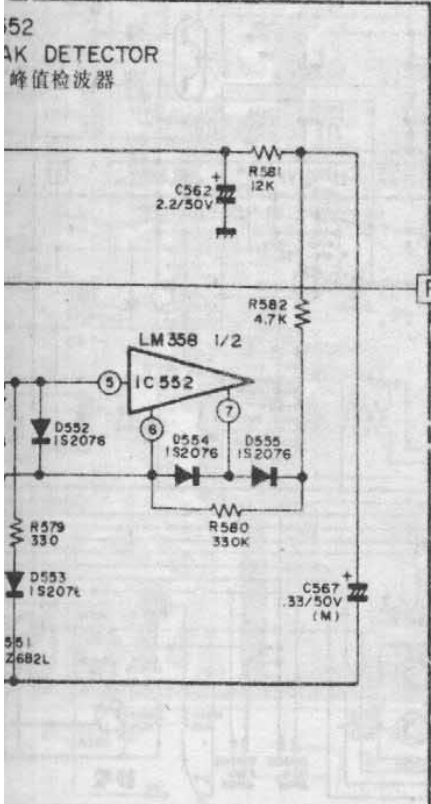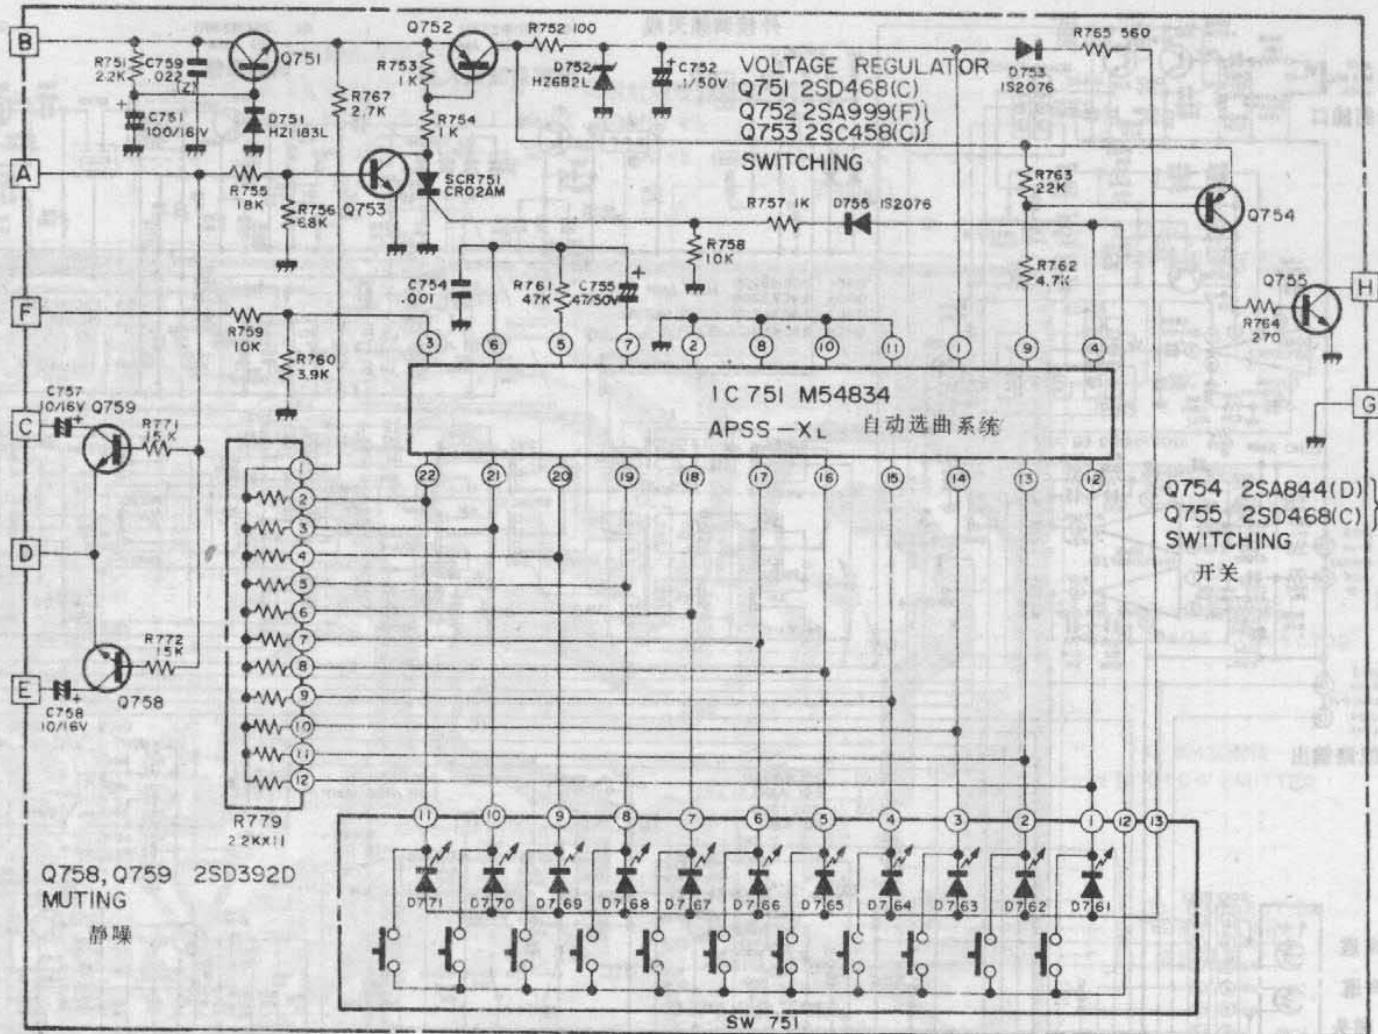

| SW NO | DESCRIPTION 说明 | POSITION |
|---------|--------------------|---------------------|
| SW 101A | AM BAND 调幅波段 | FM 调频 |
| SW 101B | SW1 BAND 短波 1 | FM |
| SW 101C | SW2 BAND 短波 2 | FM |
| SW 101D | FM BAND 调频波段 | FM |
| SW 101E | PHONO 电唱机开关 | FM |
| SW 101F | TAPE 带 | FM |
| SW 101G | MUTING 静噪 | ON - OFF |
| SW 102 | REC/PB SWITCH 录/放 | PLAYBACK-RECORD |
| SW 103 | EDITOR 编辑 | ON - OFF |
| SW 104 | MIXING SWITCH 混合 | ON - OFF |
| SW 105 | REC MODE SWITCH 方式 | MANUAL - AUTO |
| SW 106 | FM MUTING 调频静噪 | ON - OFF |
| SW 107 | MODE SELECTOR 选择 | SW WIDE-ST-MONO |
| SW 108 | LOUDNESS 响度 | ON - OFF |
| SW 109 | METER SWITCH 电表开关 | VU - TUNING |
| SW 201 | TAPE SELECTOR 带选择 | NOR - Cr O2 - METAL |
| SW 202 | SNRS 信噪比开关 | ON - OFF |
| SW 301 | BEAT CANCEL | A - B |
| SW 501 | MOTOR MAIN 电动机 | ON - OFF |
| SW 502 | APSS (FWD) | ON - OFF |
| SW 503 | APSS (REV) | ON - OFF |
| SW 701 | VOLTAGE SELECTOR | 110V - 220V - 240V |
| SW 702 | POWER SWITCH 动力开关 | ON - OFF / SLEEP |