 


# RADIO OPERATION



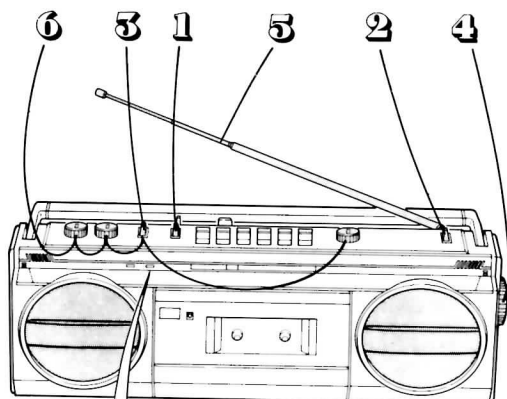


## FM STEREO INDICATOR:

Slide the MODE selector to the STEREO or STEREO WIDE position, and when the FM stereo broadcast is received, this indicator will illuminate.

- 1 Slide the FUNCTION selector to the RADIO position.
  - The POWER indicator will illuminate.
- 2 Slide the BAND selector to the SW, MW, LW or FM position.
- 3 With the BAND selector in the FM position, slide the MODE selector:
  - to the STEREO or STEREO WIDE position when you wish to listen to the FM stereo broadcast.
  - to the FM MONO position when you wish to listen to the FM monaural or an FM broadcast with a lot of interfering noise.
- 4 Rotate the TUNING control in the appropriate direction until the desired broadcast is received.
- 5 Adjust the aerial appropriately to obtain best reception on the band selected.
- 6 Adjust volume and sound quality. (Refer to page 5)

## AERIAL OPERATION

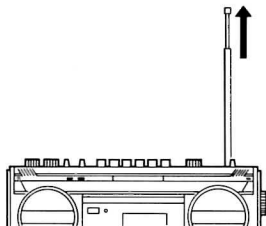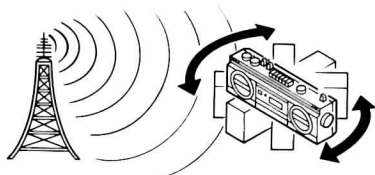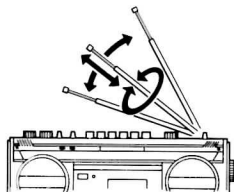

### FOR RECEIVING FM BROADCASTS

Raise and extend the telescopic rod aerial. Adjust the position and length of the aerial until FM broadcast reception signal is at peak strength.

### FOR RECEIVING MW OR LW BROADCASTS

Rotate or locate the unit to receive peak signal strength of the MW or LW broadcast.

### FOR RECEIVING SW BROADCASTS

Raise and extend the telescopic rod aerial vertically to its full length.