


# CASSETTES


## CASSETTE TAPE SELECTION

- Use only well-known brands of normal tape.
- The use of C-120 cassettes is not recommended. The extreme thinness of such tapes may result in breakage or other problems.
- Before loading, check to ensure that the tape is tightly wound (this may be verified by looking through the cassette centre window or the transparent side of the cassette). Take up any slack tape with a pencil or ball-point pen.

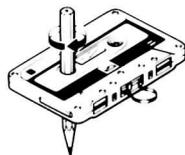

## LOADING CASSETTE TAPES

- 1 Depress the STOP/EJECT  $\blacksquare \blacktriangle$  key to open the cassette compartment cover.
- 2 Insert the tape into the cassette compartment with the exposed tape edge facing up and the title of the desired selection facing out. If the tape is wound onto the left-hand spool, it must be rewound.
- 3 Close the cassette compartment cover.

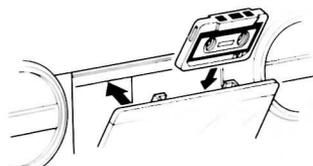

## UNLOADING


Depress the STOP/EJECT  $\blacksquare \blacktriangle$  key and remove the tape.

## PROTECTING CASSETTE TAPE AGAINST ERASURE

All cassette tapes are provided with the tabs which, when in place, allow the tape erasure to be performed. If the tab (A or B/1 or 2) is removed, the tape on the side in which tab was removed cannot be erased.

(The RECORD  $\bullet$  key can not be depressed.)

Cassette tape with side "A" (1) uppermost.

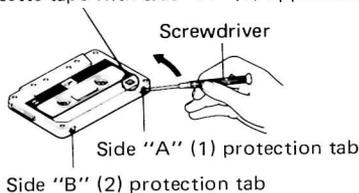

The tape can be re-recorded or erased by covering the tab holes with plastic tape.



## NOTES FOR STORING CASSETTE TAPES

- Do not put or store cassette tapes in the vicinity of powerful magnetic fields, such as those generated by radios, televisions or loudspeakers. Magnetic fields may reduce tape sensitivity or even erase recorded material.
- Do not store cassette tapes in hot, humid or dusty places for extended periods of time.

