 


# CASSETTE PLAYBACK

Since treble is emphasized on tapes recorded with the Dolby NR system, for playback of such tapes with this unit, lowering treble slightly with the TONE control makes for easier listening.

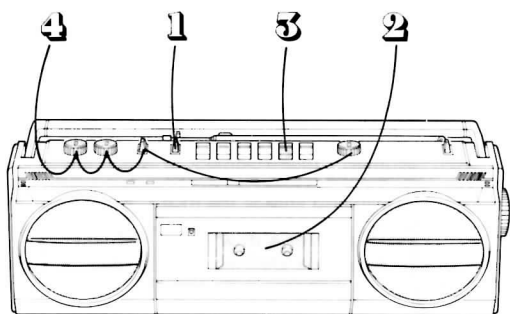

- 1 Slide the FUNCTION selector to the / TAPE position.
- 2 Load a recorded tape into the cassette compartment.
- 3 Depress the PLAY key to begin playback.
- 4 Adjust volume and sound quality. (Refer to page 5)

- To stop the tape, depress the STOP/EJECT key.
- The unit automatically returns to the neutral mode when the end of tape is reached (Auto stop), and it will turn off.


## MODE SELECTION

When the unit is in operation, be sure to depress the STOP/EJECT key before changing to another mode.

## WHEN NOT IN USE


Do not allow any keys to remain depressed when the unit is not in use, as this may result in damage to the pinch roller.

## FAST FORWARD or REWIND

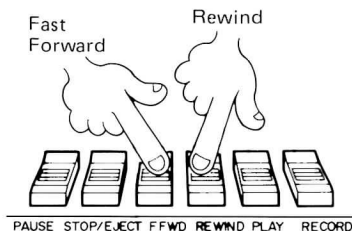

- In order to rapidly advance the tape in the same direction as playback, depress the F FWD key.
- To rewind the tape in the opposite direction to playback, depress the REWIND key.
- When the end of the tape is reached in the fast forward or rewind mode, the tape will stop, but the motor will continue to rotate. Depress the STOP/EJECT key immediately.

## PAUSE CONTROL

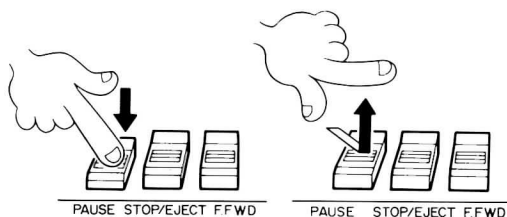

- During playback or recording, if the PAUSE key is depressed, the tape temporarily stops. When the key is depressed once again, the playback or recording begins again.